


Washington State Meter Disconnect Harnessing

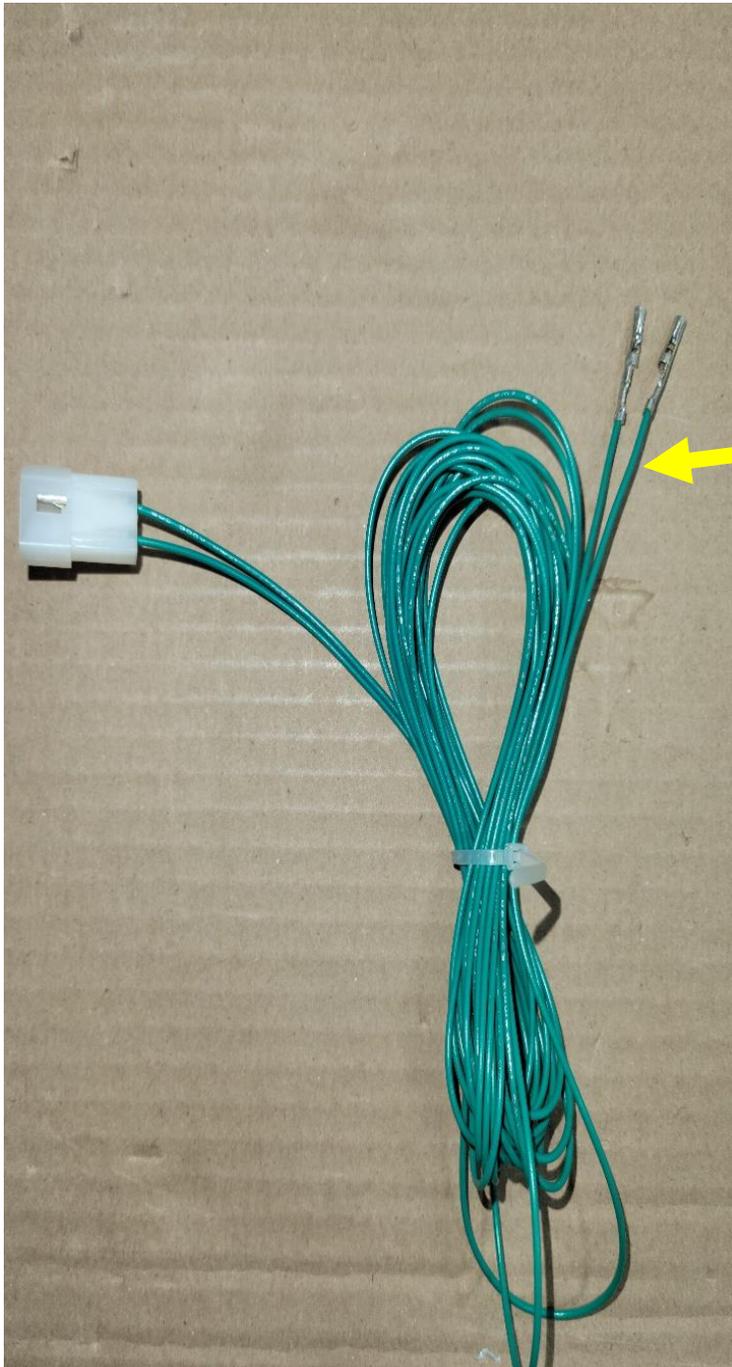


Harness A runs along the body of the cabinet. It runs from the coin and ticket meters all the way until the body section of the cabinet meets with the monitor section of the cabinet.

Make sure game is turned off and unplugged before beginning the installation of the harnessing.


Harness B runs from the electronics tray in the monitor cabinet all the way down until the until the monitor cabinet meets with the body section of the cabinet.



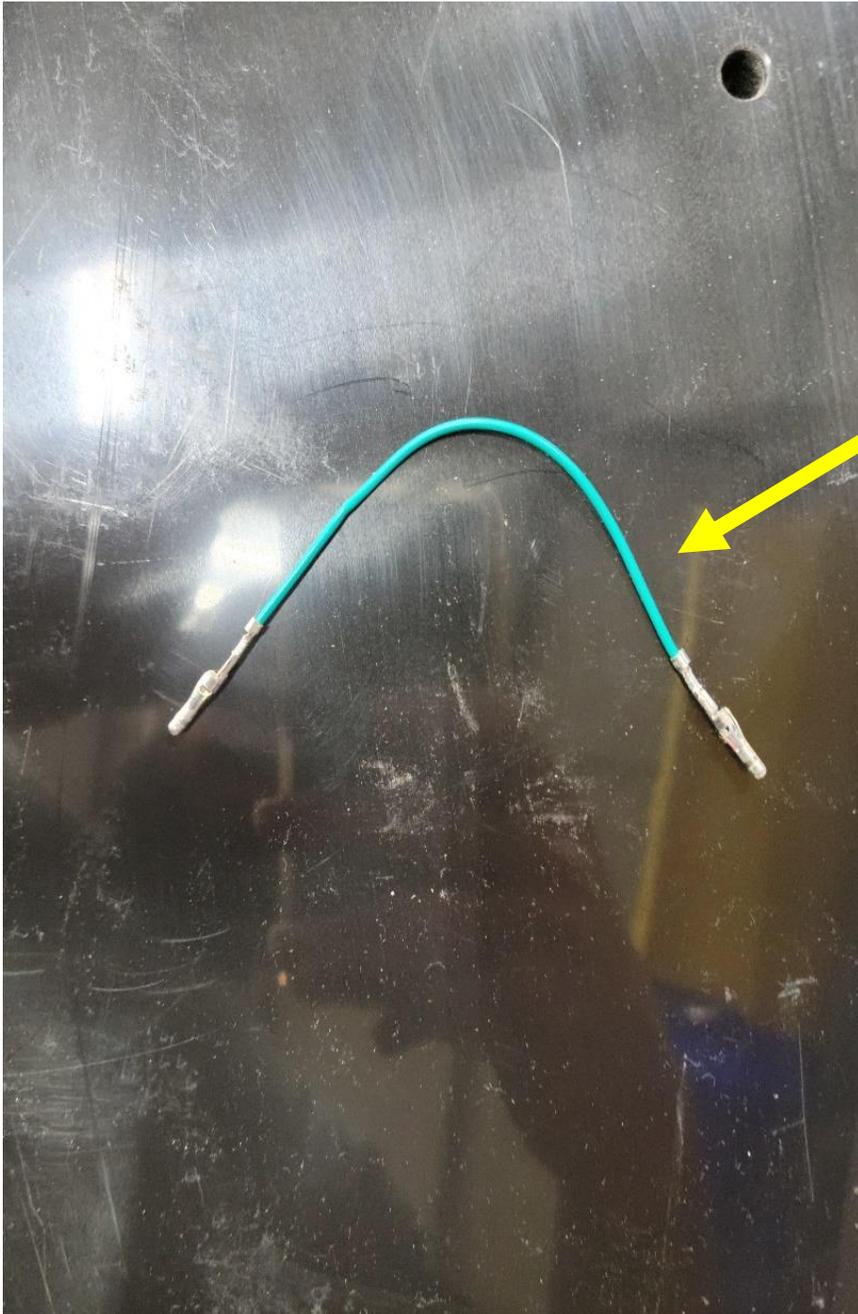



Harness C jumps between both male connectors coming off the coin and ticket meters located in the front of the game.


First, you want to open the front of the game and locate the coin and ticket meters and disconnect them

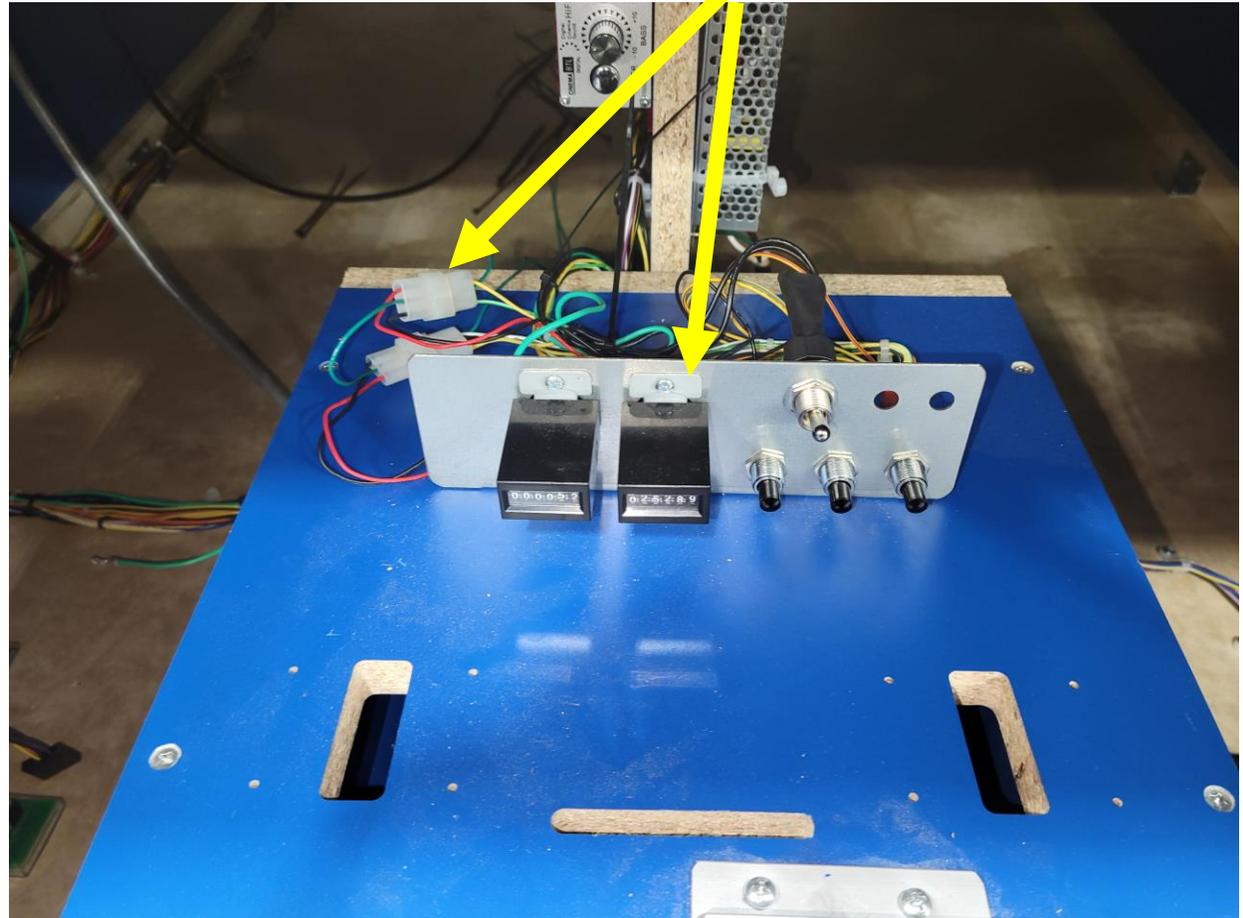


Next, you have to take Harness C and plug it into pin two on both connectors coming off of the coin and ticket meters as shown.


Then, you want to take Harness A and plug it into the female end of the meter harness as shown below. Once finished you can plug the meters back in. The ticket meter (one on the right) plugs into the connector with the green wire with the white stripe.

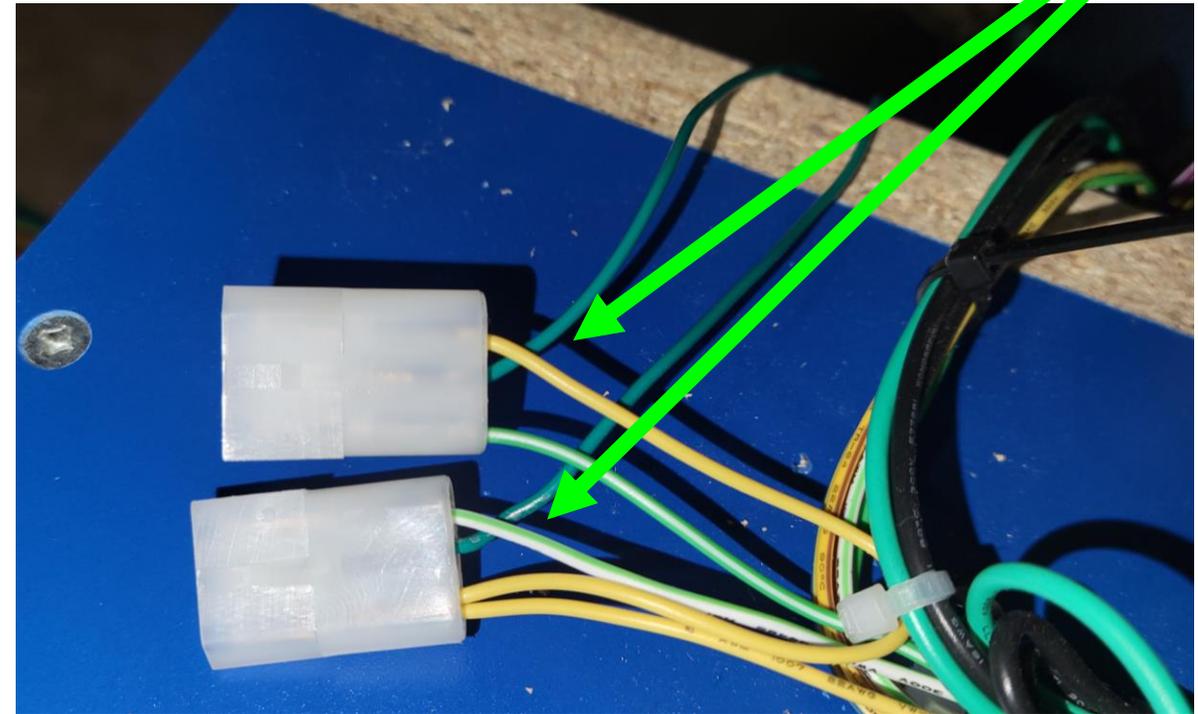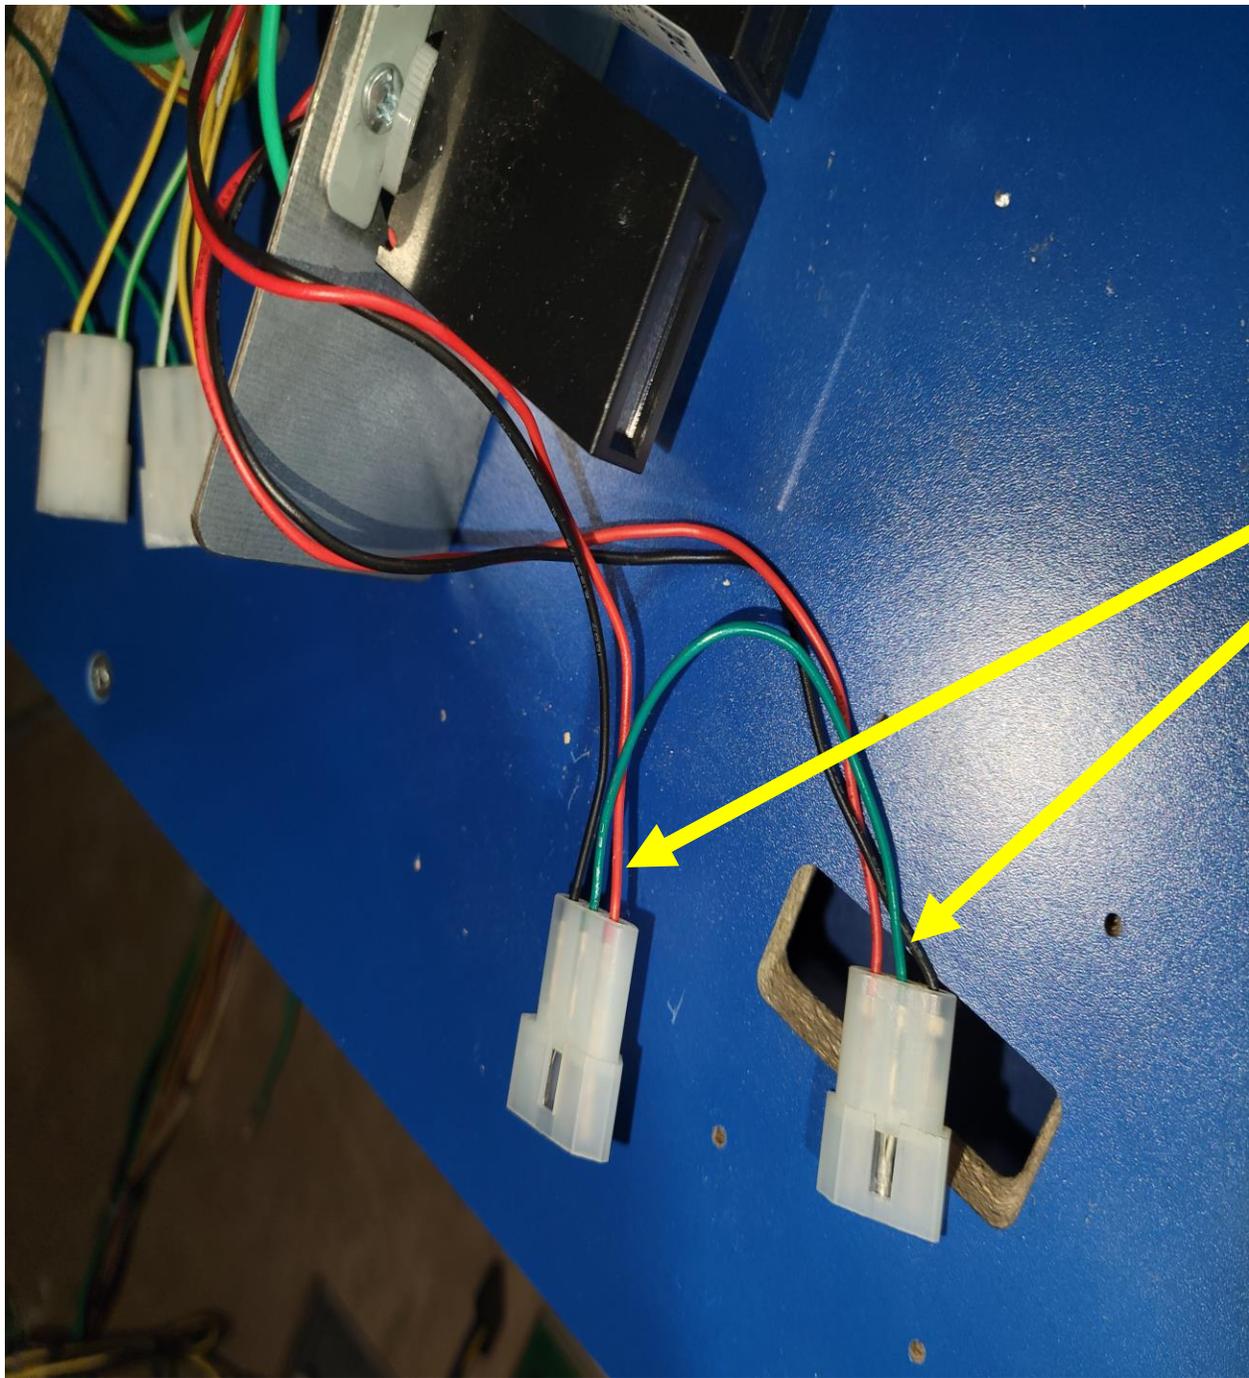

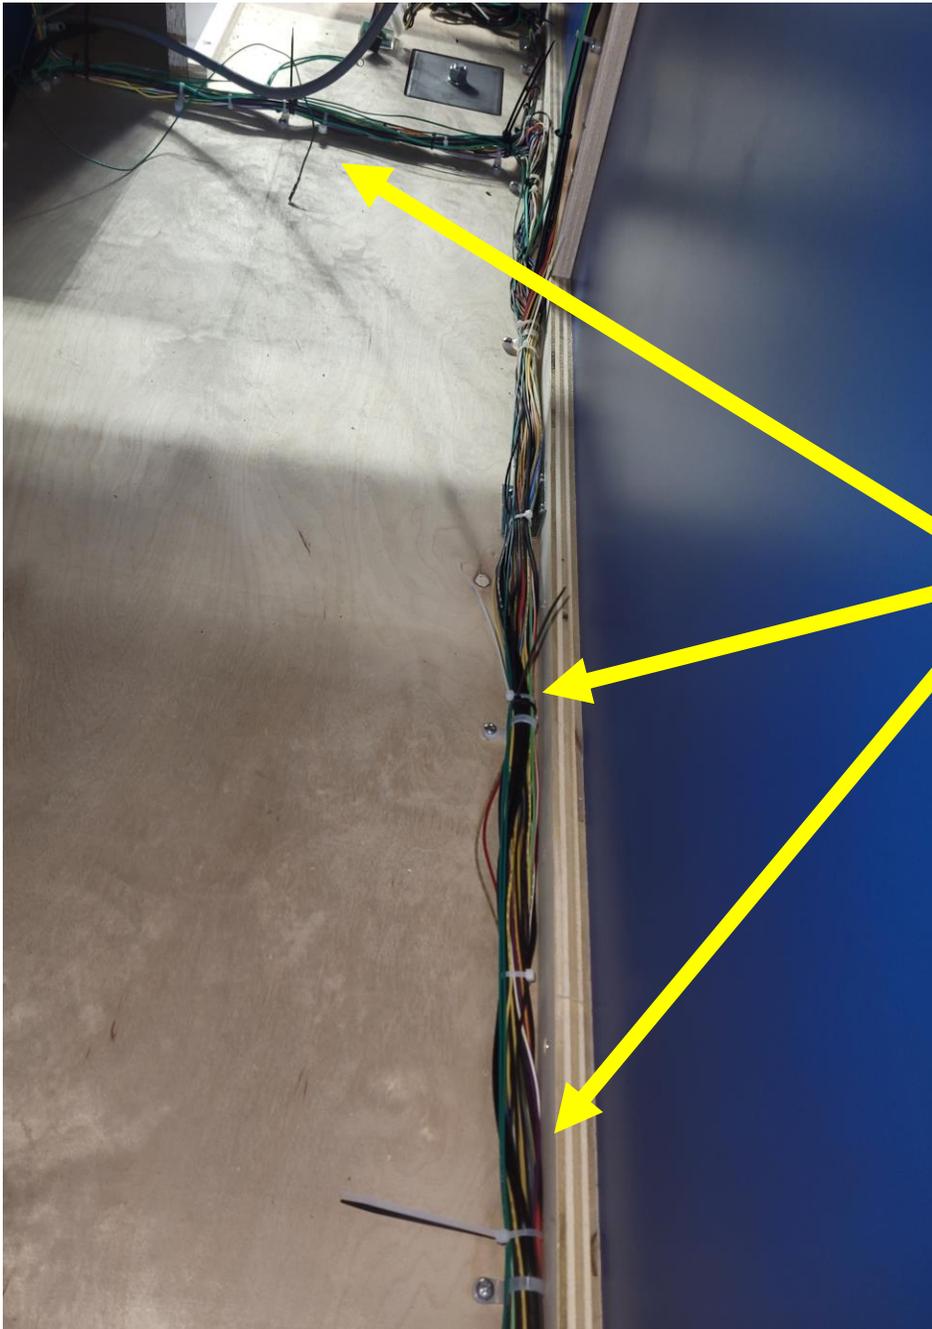



After you plug in the meters, take Harness A and run it along the inside of the body cabinet and zip tie it to the existing main harness on the floor. Once completed the two pin male connector from Harness A should come together with the other disconnects from the main harness.

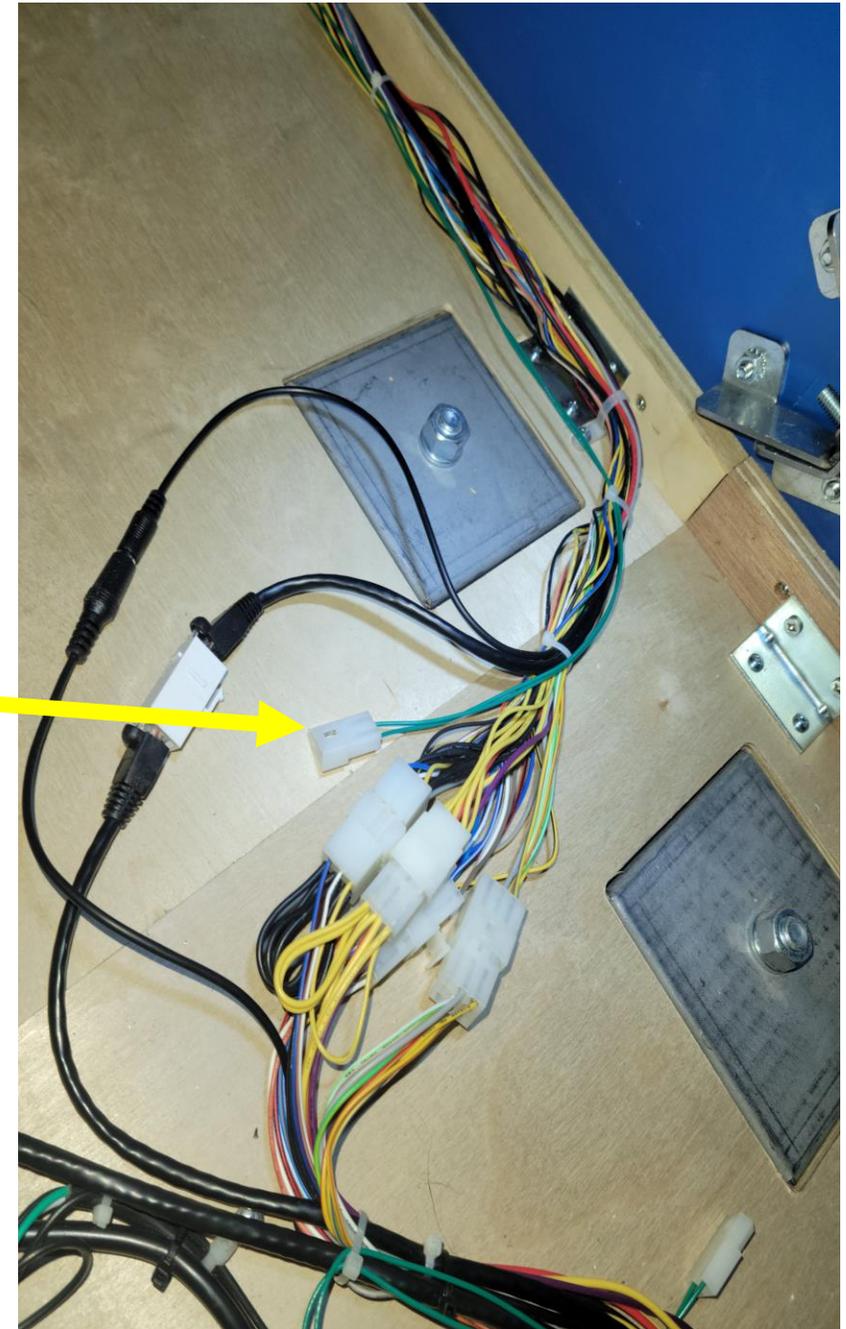

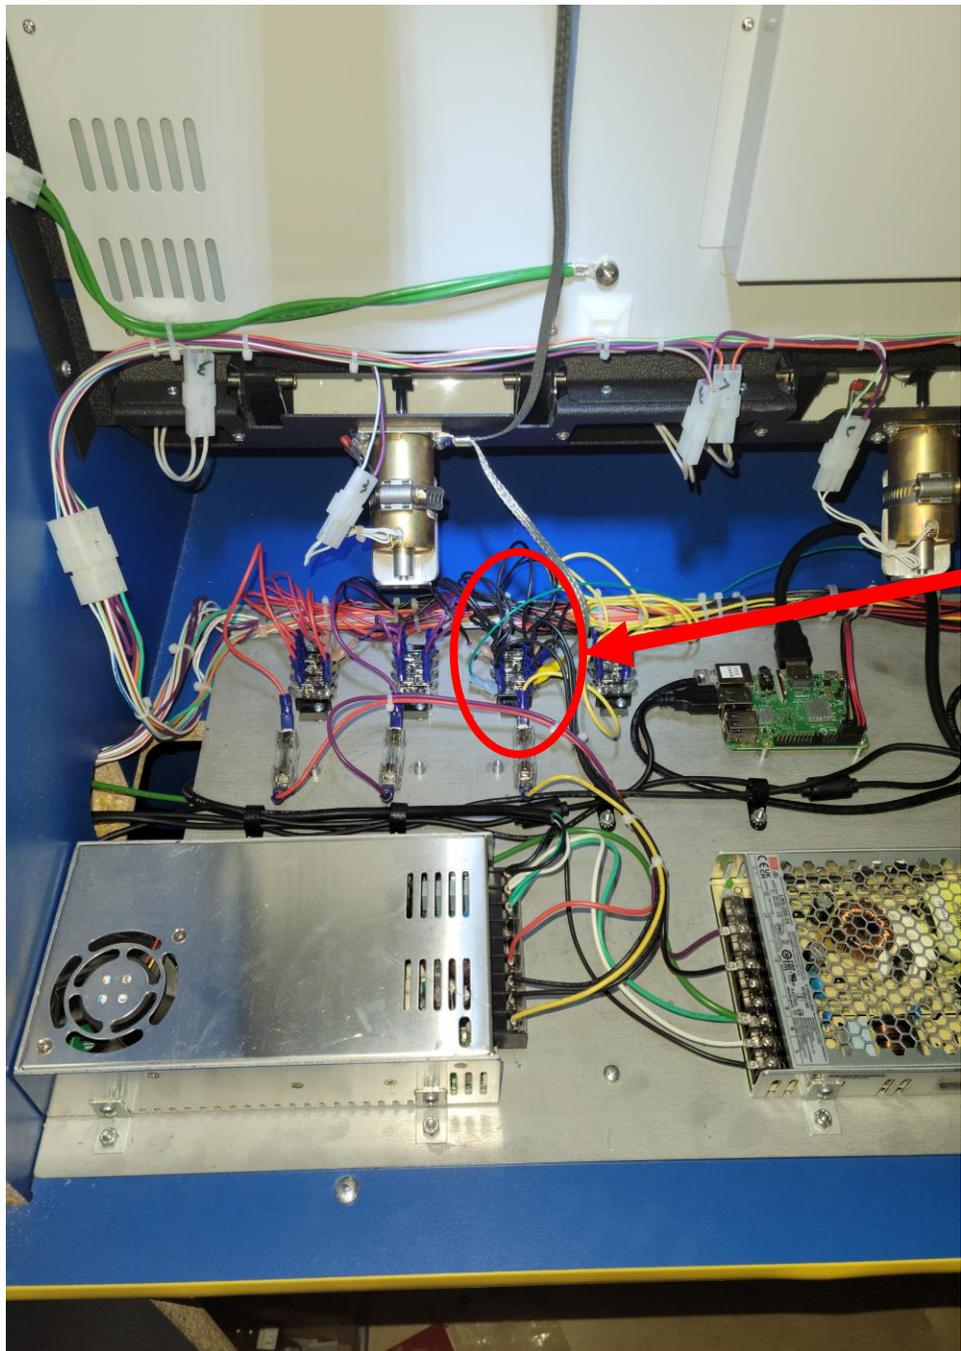




Then, you are going to take the other wire with the blue lug from Harness B and plug it into the ground terminal block as shown. (The Terminal block with all the black wires plugged into it).

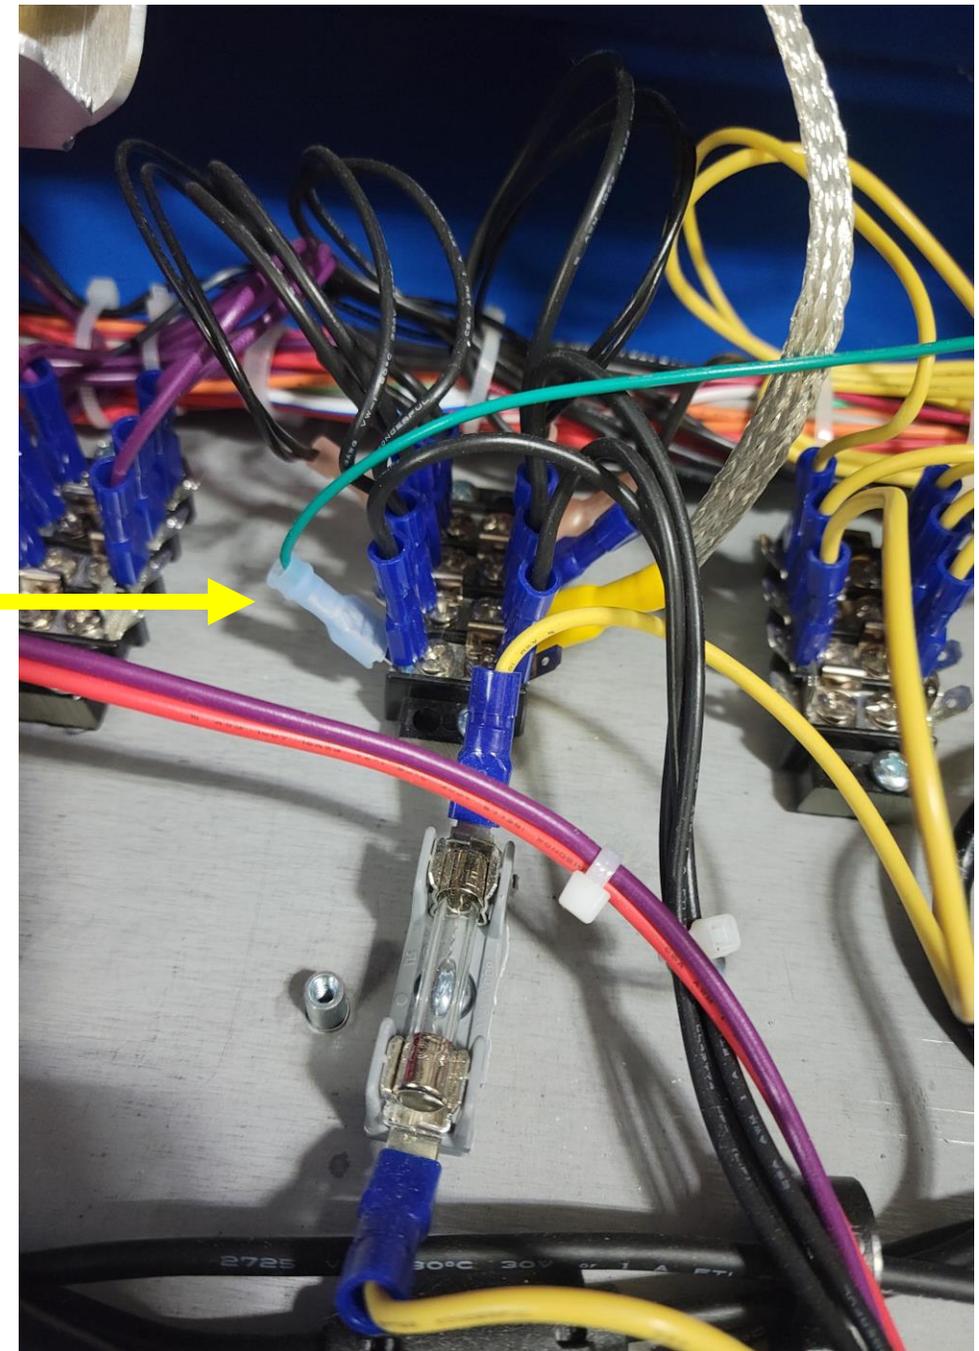

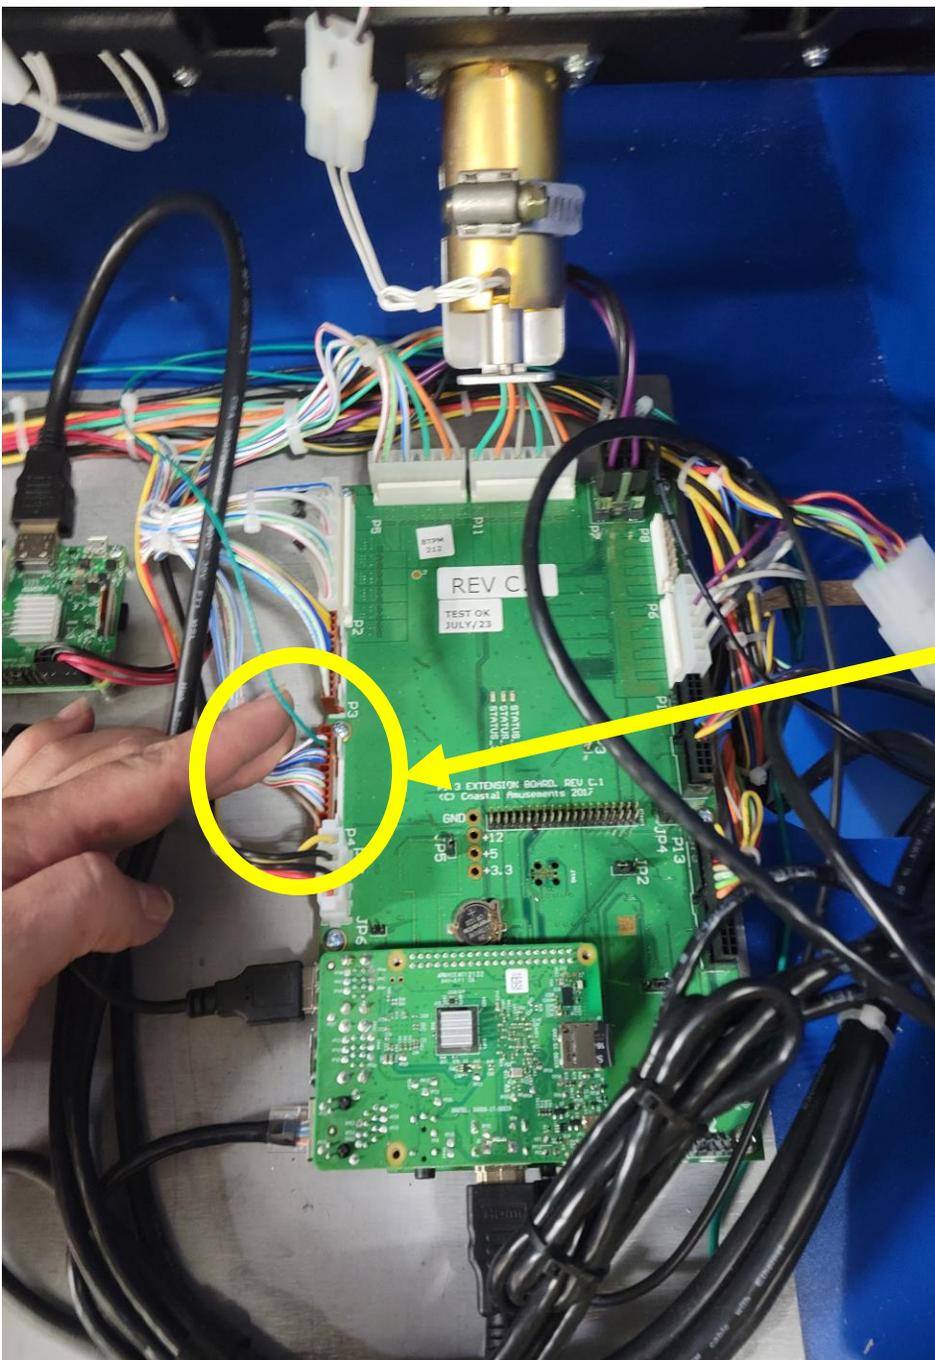


Next, you want to take the top back door of the rear of the cabinet so you can access the main board. Once you locate the main board, grab Harness B, and locate connector P4 as shown. Take the wire with mini video pin and plug in the connector P4 Pin 11 as shown on the right. It will go between a white/red wire and a blue/white wire

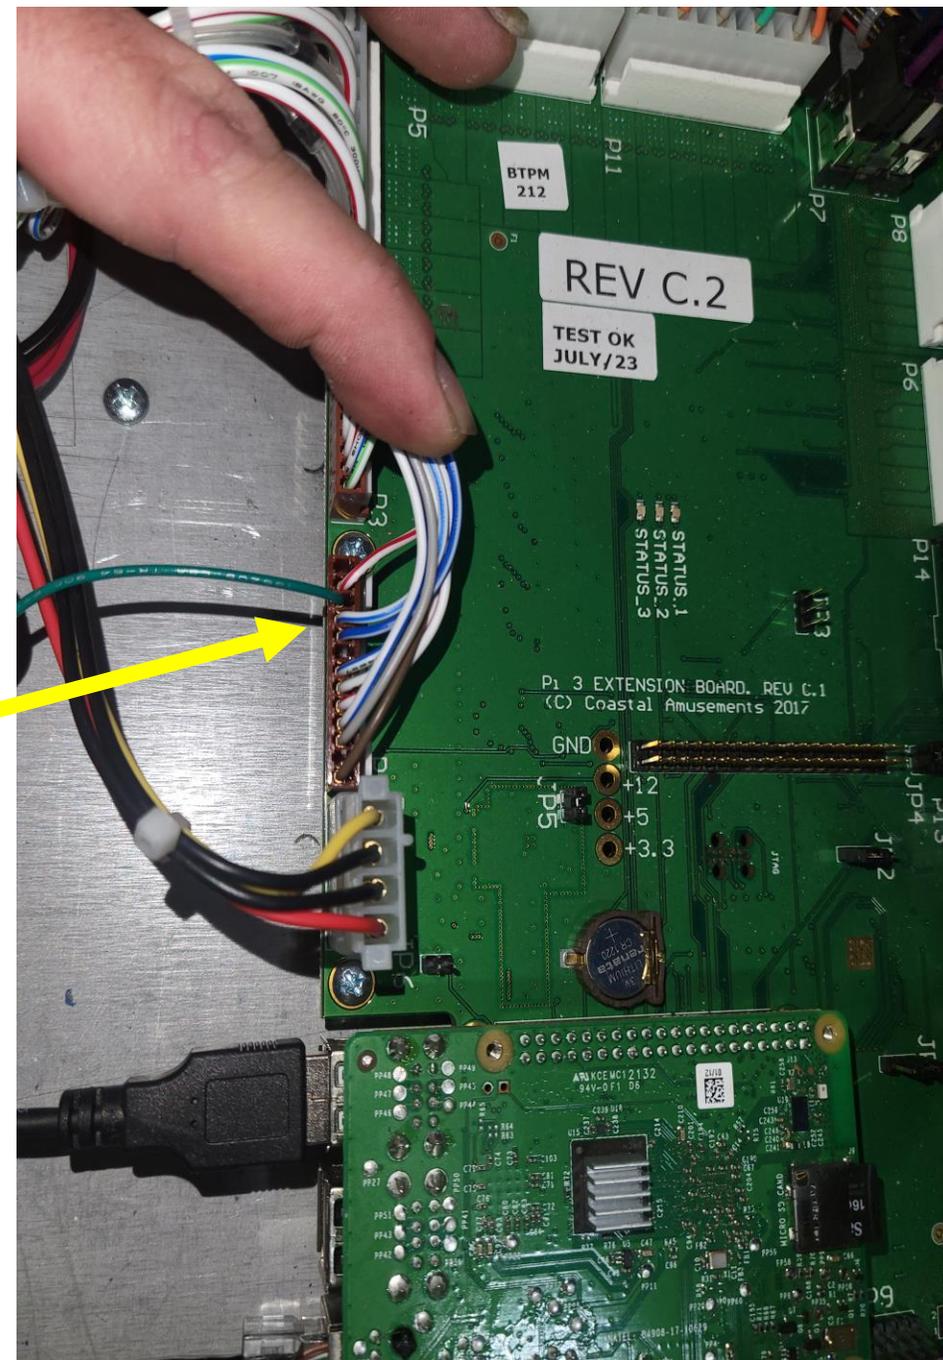


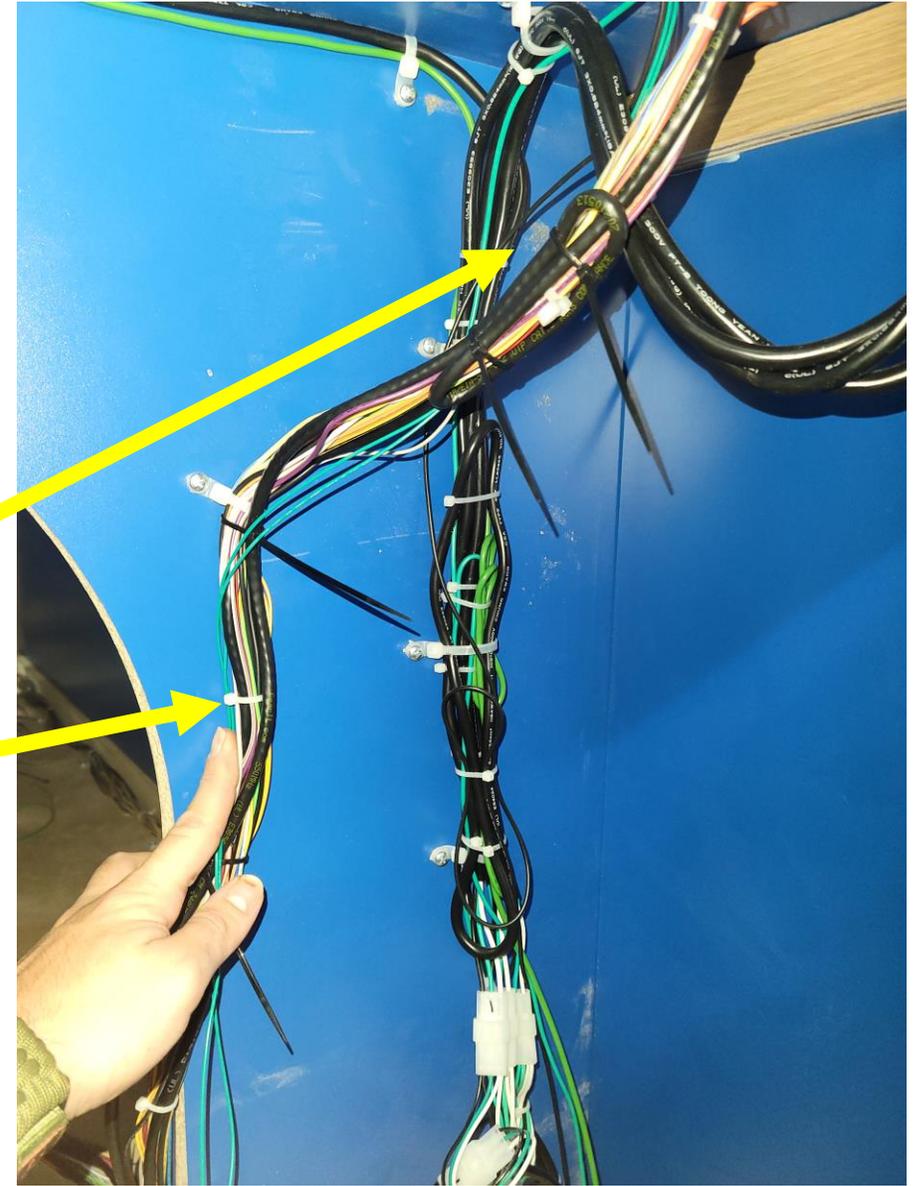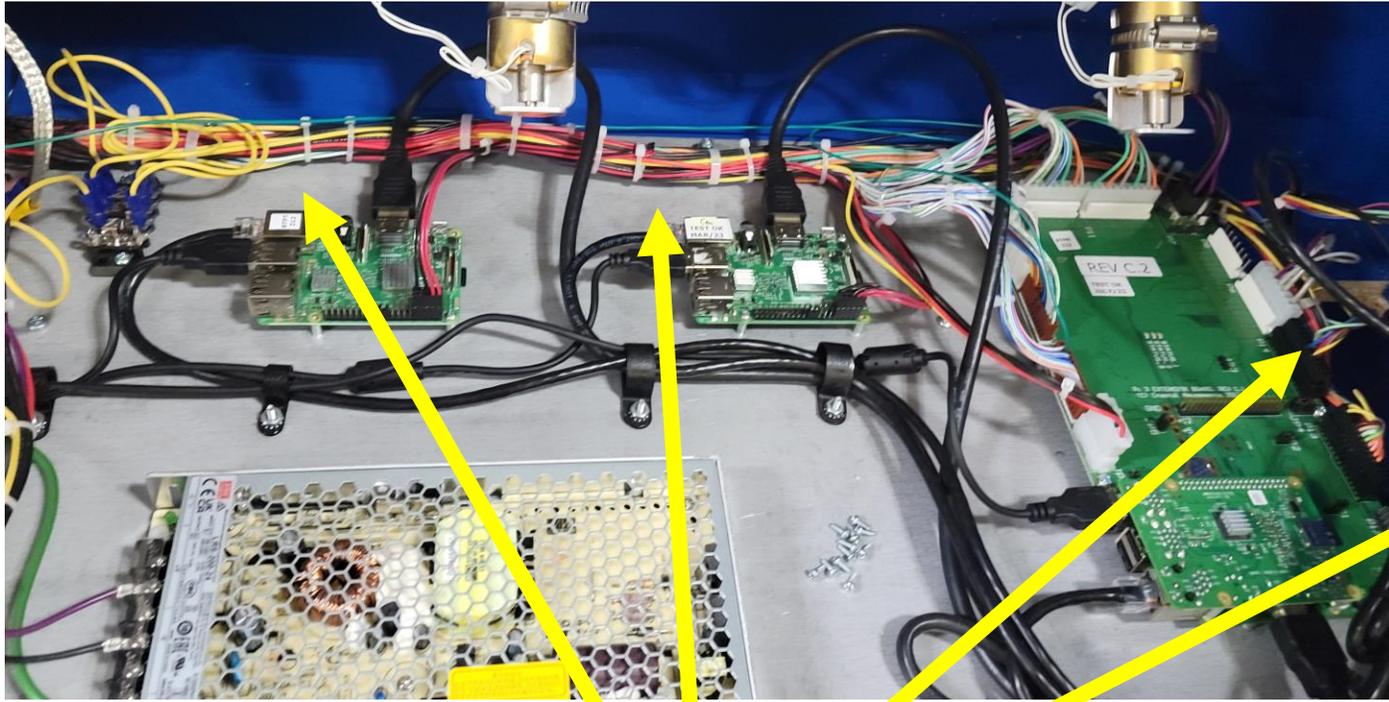

After you plugged in Harness B, you can then run the harness along the main harness, adding some zip ties as you go. Take the end of the harness, with the two pin female connector and run it down the mouse hole with the main harness on the right side of the game as shown.

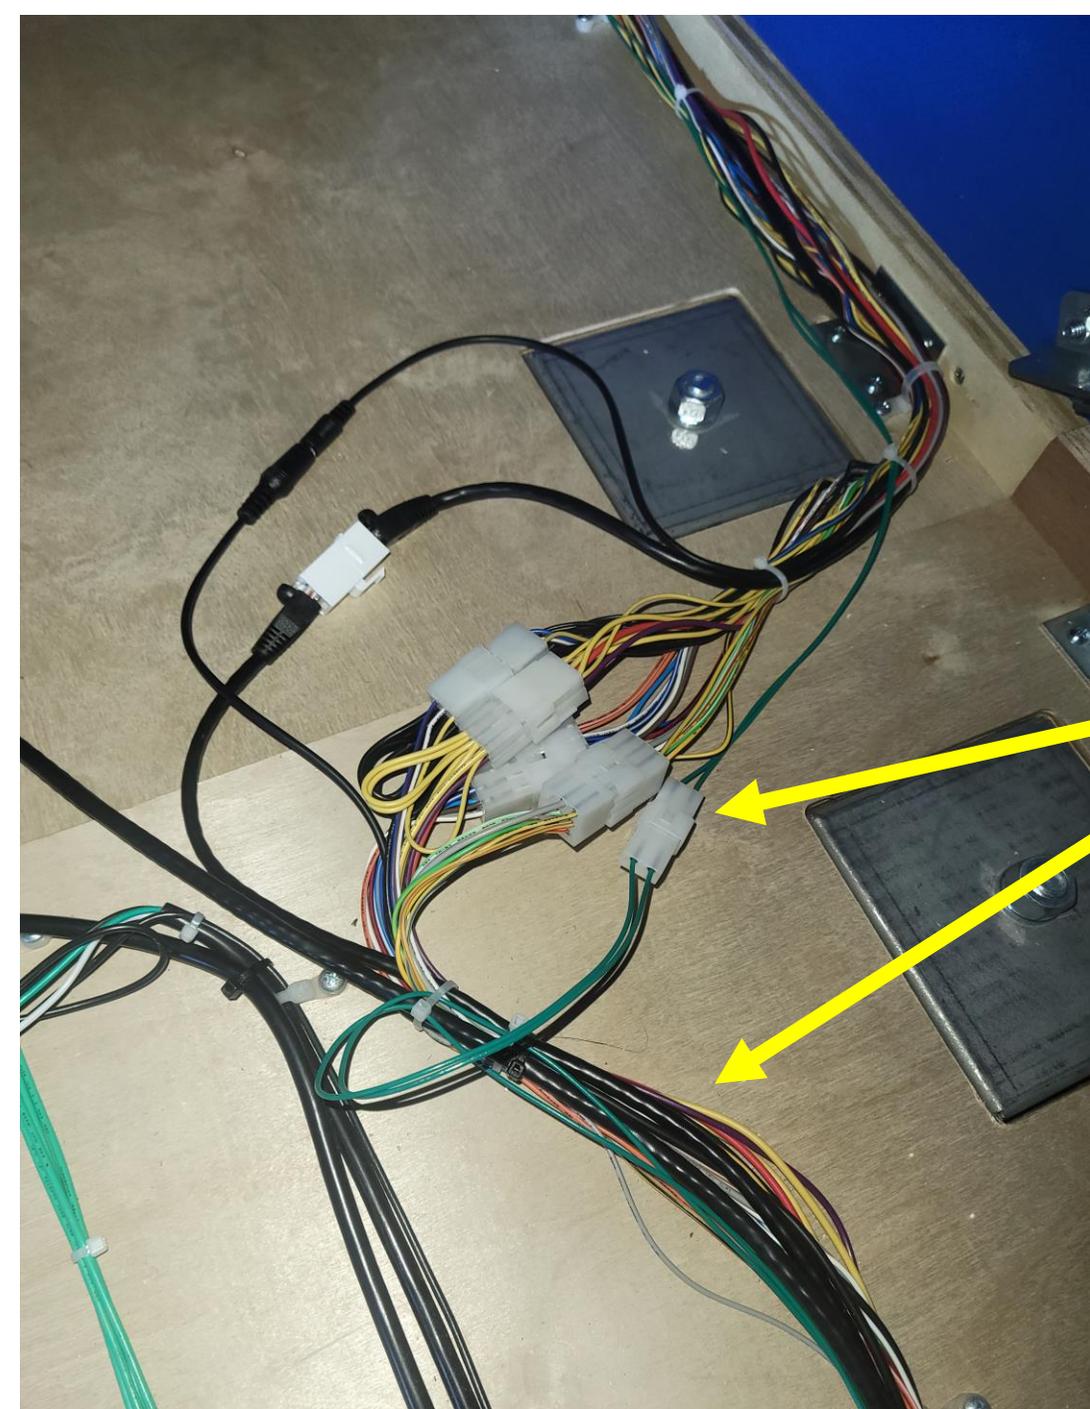

The last step is to finish tying the new harness to the existing main harness. Then, plug Harness A and B into each other. Now that you finished the installation you can turn the game on and verify that every step was done properly. The next page will show you how to check and make sure.

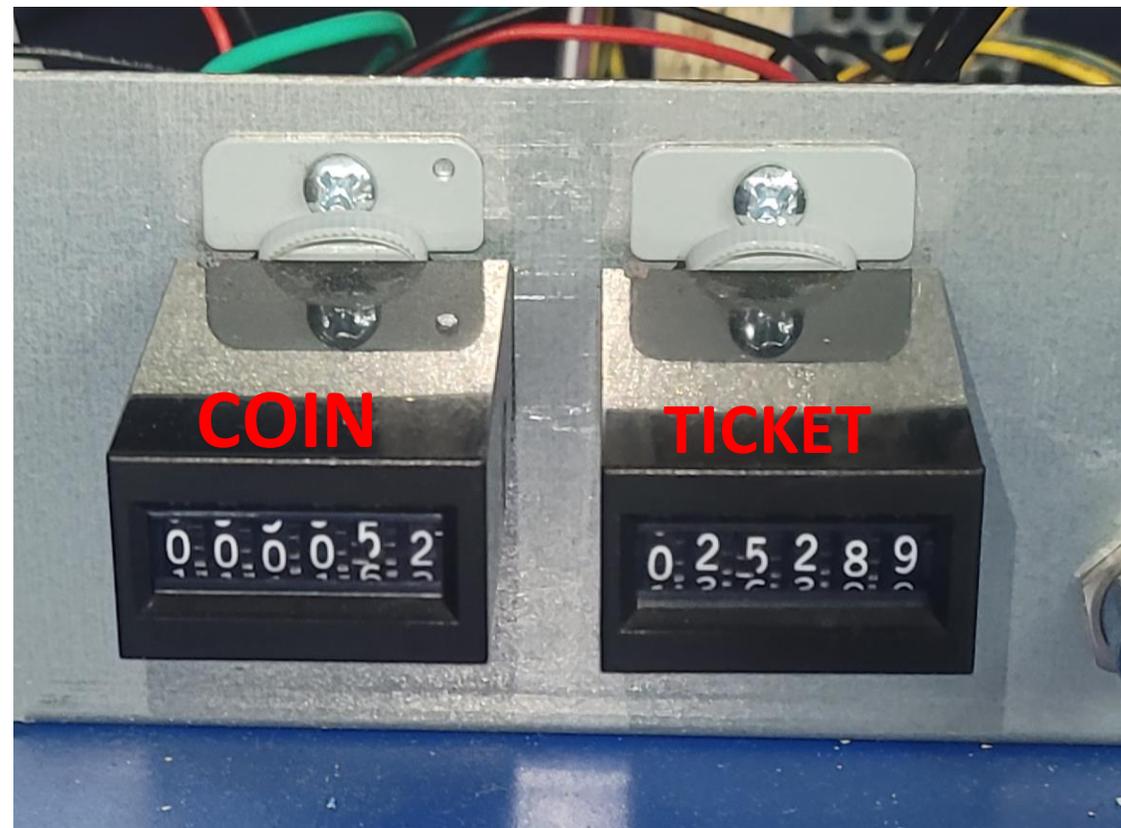

Once you turn the game on and it enters the attract mode,(music playing and images coming across the monitors you can begin to verify the harness was installed properly. First thing you want to do is to credit the game and make sure the coin meter (one on the left increases when you put credit it). Play the game so you earn some tickets and ensure the ticket meter(one on the right increases). If the wrong meter increases when you credit the game just unplug the two 3 pins coming from the meters and swap them. If the meters were plugged in correctly, then go ahead and unplug one of them with the game on. Then the game should come up with an error message as shown in the top left picture. You should also hear from the game say, “please call attendant”. If that happens than the install was done properly. Power off the game, plug the meter back in, and then power the game back up. The error message will be gone and the game will function as it should.